

Código	Descripción	Precio
960006	005.061A / 5-375-2 Llave Ajustable Irimo 15" IRIMO	\$ 0
960036	025061A / 25-06-2 Llave Comb. Irimo 6 mm. IRIMO	\$ 0
960037	025071A / 25-07-2 Llave Comb. Irimo 7 mm. IRIMO	\$ 0
960038	025081A / 25-08-2 Llave Combi. Irimo 8 mm. IRIMO	\$ 0
960039	025091A / 25-09-2 Llave Combi. Irimo 9 mm. IRIMO	\$ 0
960040	025101A / 25-10-2 Llave Combi. Irimo 10 mm. IRIMO	\$ 0
960041	025111A / 25-11-2 Llave Combi. Irimo 11 mm. IRIMO	\$ 0
960042	025121A / 25-12-2 Llave Combi. Irimo 12 mm. IRIMO	\$ 0
960043	025131A / 25-13-2 Llave Combi. Irimo 13 mm. IRIMO	\$ 0
960044	025141A / 25-14-2 Llave Combi. Irimo 14 mm. IRIMO	\$ 0
960045	025151A / 25-15-2 Llave Combi. Irimo 15 mm. IRIMO	\$ 0
960046	025161A / 25-16-2 Llave Combi. Irimo 16 mm. IRIMO	\$ 0
960047	025171A / 25-17-2 Llave Combi. Irimo 17 mm. IRIMO	\$ 0
960048	025181A / 25-18-2 Llave Combi. Irimo 18 mm. IRIMO	\$ 0
960049	025191A / 25-19-2 Llave Combi. Irimo 19 mm. IRIMO	\$ 0
960050	025201A / 25-20-2 Llave Combi. Irimo 20 mm. IRIMO	\$ 0
960051	025211A / 25-21-2 Llave Combi. Irimo 21 mm. IRIMO	\$ 0
960052	025221A / 25-22-2 Llave Combi. Irimo 22 mm. IRIMO	\$ 0
960053	025231A / 25-23-2 Llave Combi. Irimo 23 mm. IRIMO	\$ 0
960054	025241A / 25-24-2 Llave Combi. Irimo 24 mm. IRIMO	\$ 0
960055	025251A / 25-25-2 Llave Combi. Irimo 25 mm. IRIMO	\$ 0
960056	025261A / 25-26-2 Llave Combi. Irimo 26 mm. IRIMO	\$ 0
960057	025271A / 25-27-2 Llave Combi. Irimo 27 mm. IRIMO	\$ 0
960058	025281A / 25-28-2 Llave Combi. Irimo 28 mm. IRIMO	\$ 0
960059	025291A / 25-29-2 Llave Combi. Irimo 29 mm. IRIMO	\$ 0
960060	025301A / 25-30-2 Llave Combi. Irimo 30 mm. IRIMO	\$ 0
960062	025321A / 25-32-2 Llave Combi. Irimo 32 mm. IRIMO	\$ 0
960070	025511A / 25A-08-2 Llave Combi. Irimo 1/4 " IRIMO	\$ 0
960071	025521A / 25A-10-2 Llave Combi. Irimo 5/16" IRIMO	\$ 0
960072	025531A / 25A-12-2 Llave Combi. Irimo 3/8 " IRIMO	\$ 0
960073	025541A / 25A-14-2 Llave Combi. Irimo 7/16" IRIMO	\$ 0
960074	025551A / 25A-16-2 Llave Combi. Irimo 1/2 " IRIMO	\$ 0
960075	025561A / 25A-18-2 Llave Combi. Irimo 9/16" IRIMO	\$ 0
960076	025571A / 25A-20-2 Llave Combi. Irimo 5/8 " IRIMO	\$ 0
960077	025581A / 25A-22-2 Llave Combi. Irimo 11/16" IRIMO	\$ 0
960078	025591A / 25A-24-2 Llave Combi. Irimo 3/4 " IRIMO	\$ 0
960079	025601A / 25A-26-2 Llave Combi. Irimo 13/16" IRIMO	\$ 0
960080	025611A / 25A-28-2 Llave Combi. Irimo 7/8 " IRIMO	\$ 0
960081	025621A / 25A-30-2 Llave Combi. Irimo 15/16" IRIMO	\$ 0
960082	025631A / 25A-32-2 Llave Combi. Irimo 1 " IRIMO	\$ 0
960083	025641A / 25A-34-2 Llave Combi. Irimo 1.1/16" IRIMO	\$ 0
960084	025651A / 25A-36-2 Llave Combi. Irimo 1.1/8 " IRIMO	\$ 0
960085	025671A / 25A-40-2 Llave Combi. Irimo 1.1/4 " IRIMO	\$ 0
960086	025675A Llave Combinada Irimo 1.5/16" IRIMO	\$ 0
961320	070471 Torquimetro 3/4 160-800 NM IRIMO	\$ 0
960094	101-06-1 Bocallave Hexag. Enc.1/4 6 mm. IRIMO	\$ 0
960095	101-07-1 Bocallave Hexag. Enc.1/4 7 mm. IRIMO	\$ 0
960096	101-08-1 Bocallave Hexag. Enc.1/4 8 mm. IRIMO	\$ 0
960097	101-09-1 Bocallave Hexag. Enc.1/4 9 mm. IRIMO	\$ 0
960098	101-10-1 Bocallave Hexag. Enc.1/4 10 mm. IRIMO	\$ 0
960099	101-11-1 Bocallave Hexag. Enc.1/4 11 mm. IRIMO	\$ 0

Código	Descripción	Precio
960100	101-12-1 Bocallave Hexag. Enc.1/4 12 mm. IRIMO	\$ 0
960101	101-13-1 Bocallave Hexag. Enc.1/4 13 mm. IRIMO	\$ 0
960102	101-14-1 Bocallave Hexag. Enc.1/4 14 mm. IRIMO	\$ 0
960090	101021 / 101-04-1 Bocallave Hexag. Enc.1/4 4 mm. IRIMO	\$ 0
960091	101031 / 101-045-1 Bocallave Hexag. Enc.1/4 4.5mm. IRIMO	\$ 0
960092	101041 / 101-05-1 Bocallave Hexag. Enc.1/4 5 mm. IRIMO	\$ 0
960093	101051 / 101-055-1 Bocallave Hexag. Enc.1/4 5.5mm. IRIMO	\$ 0
960120	101601/101A-06-1 Bocallave Hexag. Enc.1/4 3/16" IRIMO	\$ 0
960124	101681/101A-14-1 Bocallave Hexag. Enc.1/4 7/16" IRIMO	\$ 0
960118	101A-05-1 Bocallave Hexag. Enc. 1/4 5/32" IRIMO	\$ 0
960127	101A-07-1 Bocallave Hexag. Enc. 1/4 7/32 IRIMO	\$ 0
960128	101A-09-1 Bocallave Hexag. Enc. 1/4 9/32" IRIMO	\$ 0
960122	101A-10-1 Bocallave Hexag. Enc.1/4 5/16" IRIMO	\$ 0
960129	101A-11-1 Bocallave Hexag. Enc. 1/4 11/32" IRIMO	\$ 0
960123	101A-12-1 Bocallave Hexag. Enc.1/4 3/8 " IRIMO	\$ 0
960125	101A-16-1 Bocallave Hexag. Enc.1/4 1/2 " IRIMO	\$ 0
960126	101A-18-1 Bocallave Hexag. Enc.1/4 9/16" IRIMO	\$ 0
960142	103-04-1 Bocallave Enc.1/4 Hex. Larga 4 IRIMO	\$ 0
960141	103-045-1 Bocallave Enc.1/4 Hex. Larga 4.5 IRIMO	\$ 0
960143	103-05-1 Bocallave Enc.1/4 Hex. Larga 5 IRIMO	\$ 0
960147	103091 / 103-09-1 Bocallave Enc.1/4 Hex. Larga 9 IRIMO	\$ 0
960152	103141 / 103-14-1 Bocallave Enc.1/4 Hex. Larga 14 IRIMO	\$ 0
960597	105-46-1 Adaptador Enc 1/4 1/4" a 3/8" IRIMO	\$ 0
960592	105131 Extension Angular + 1/4-150mm IRIMO	\$ 0
960604	105811 Disc. 1/4 IRIMO	\$ 0
960136	106-10-1 Bocallave Enc.1/4 Torx E-10 IRIMO	\$ 0
960131	106051 / 106-05-1 Bocallave Enc.1/4 Torx E-5 IRIMO	\$ 0
960132	106061 / 106-06-1 Bocallave Enc.1/4 Torx E-6 IRIMO	\$ 0
960133	106071 / 106-07-1 Bocallave Enc.1/4 Torx E-7 IRIMO	\$ 0
960170	121081A / 121-08-1 Bocallave Enc.1/2 Hex. 8 mm IRIMO	\$ 0
960172	121101A / 121-10-1 Bocallave Enc.1/2 Hex. 10 mm IRIMO	\$ 0
960173	121111A / 121-11-1 Bocallave Enc.1/2 Hex. 11 mm IRIMO	\$ 0
960174	121121A / 121-12-1 Bocallave Enc.1/2 Hex. 12 mm IRIMO	\$ 0
960175	121131A / 121-13-1 Bocallave Enc.1/2 Hex. 13 mm IRIMO	\$ 0
960176	121141A / 121-14-1 Bocallave Enc.1/2 Hex. 14 mm IRIMO	\$ 0
960177	121151A / 121-15-1 Bocallave Enc.1/2 Hex. 15 mm IRIMO	\$ 0
960178	121161A / 121-16-1 Bocallave Enc.1/2 Hex. 16 mm IRIMO	\$ 0
960179	121171A / 121-17-1 Bocallave Enc.1/2 Hex. 17 mm IRIMO	\$ 0
960180	121181A / 121-18-1 Bocallave Enc.1/2 Hex. 18 mm IRIMO	\$ 0
960181	121191A / 121-19-1 Bocallave Enc.1/2 Hex. 19 mm IRIMO	\$ 0
960182	121201A / 121-20-1 Bocallave Enc.1/2 Hex. 20 mm IRIMO	\$ 0
960183	121211A / 121-21-1 Bocallave Enc.1/2 Hex. 21 mm IRIMO	\$ 0
960184	121221A / 121-22-1 Bocallave Enc.1/2 Hex. 22 mm IRIMO	\$ 0
960185	121231A / 121-23-1 Bocallave Enc.1/2 Hex. 23 mm IRIMO	\$ 0
960186	121241A / 121-24-1 Bocallave Enc.1/2 Hex. 24 mm IRIMO	\$ 0
960187	121251A / 121-25-1 Bocallave Enc.1/2 Hex. 25 mm IRIMO	\$ 0
960188	121261A / 121-26-1 Bocallave Enc.1/2 Hex. 26 mm IRIMO	\$ 0
960189	121271A / 121-27-1 Bocallave Enc.1/2 Hex. 27 mm IRIMO	\$ 0
960190	121281A / 121-28-1 Bocallave Enc.1/2 Hex. 28 mm IRIMO	\$ 0
960192	121301A / 121-30-1 Bocallave Enc.1/2 Hex. 30 mm IRIMO	\$ 0
960193	121321A / 121-32-1 Bocallave Enc.1/2 Hex. 32 mm IRIMO	\$ 0

Código	Descripción	Precio
960200	121661A Bocallave Enc.1/2 Hex. 3/8 IRIMO	\$ 0
960201	121681A Bocallave Enc.1/2 Hex. 7/16" IRIMO	\$ 0
960206	121761A Bocallave Enc.1/2 Hex. 3/4 " IRIMO	\$ 0
960207	121781A Bocallave Enc.1/2 Hex.13/16" IRIMO	\$ 0
960208	121791A Bocallave Enc.1/2 Hex. 7/8 " IRIMO	\$ 0
960209	121801A Bocallave Enc.1/2 Hex. 15/16" IRIMO	\$ 0
960210	121821A Bocallave Enc.1/2 Hex. 1 " IRIMO	\$ 0
960211	121831A Bocallave Enc.1/2 Hex. 1.1/16" IRIMO	\$ 0
960212	121841A Bocallave Enc.1/2 Hex. 1.1/8 " IRIMO	\$ 0
960213	121851A Bocallave Enc.1/2 Hex. 1.3/16" IRIMO	\$ 0
960214	121861A Bocallave Enc.1/2 Hex. 1.1/4 " IRIMO	\$ 0
960328	122081A / 122-08-1 Bocallave Estriada Enc.1/2 8 mm IRIMO	\$ 0
960329	122091A / 122-09-1 Bocallave Estriada Enc.1/2 9 mm IRIMO	\$ 0
960330	122101A / 122-10-1 Bocallave Estriada Enc.1/2 10 mm IRIMO	\$ 0
960331	122111A / 122-11-1 Bocallave Estriada Enc.1/2 11 mm IRIMO	\$ 0
960332	122121A / 122-12-1 Bocallave Estriada Enc.1/2 12 mm IRIMO	\$ 0
960333	122131A / 122-13-1 Bocallave Estriada Enc.1/2 13 mm IRIMO	\$ 0
960334	122141A / 122-14-1 Bocallave Estriada Enc.1/2 14 mm IRIMO	\$ 0
960335	122151A / 122-15-1 Bocallave Estriada Enc.1/2 15 mm IRIMO	\$ 0
960336	122161A / 122-16-1 Bocallave Estriada Enc.1/2 16 mm IRIMO	\$ 0
960337	122171A / 122-17-1 Bocallave Estriada Enc.1/2 17 mm IRIMO	\$ 0
960338	122181A / 122-18-1 Bocallave Estriada Enc.1/2 18 mm IRIMO	\$ 0
960339	122191A / 122-19-1 Bocallave Estriada Enc.1/2 19 mm IRIMO	\$ 0
960340	122201A / 122-20-1 Bocallave Estriada Enc.1/2 20 mm IRIMO	\$ 0
960341	122211A / 122-21-1 Bocallave Estriada Enc.1/2 21 mm IRIMO	\$ 0
960342	122221A / 122-22-1 Bocallave Estriada Enc.1/2 22 mm IRIMO	\$ 0
960343	122231A / 122-23-1 Bocallave Estriada Enc.1/2 23 mm IRIMO	\$ 0
960344	122241A / 122-24-1 Bocallave Estriada Enc.1/2 24 mm IRIMO	\$ 0
960345	122251A / 122-25-1 Bocallave Estriada Enc.1/2 25 mm IRIMO	\$ 0
960346	122261A / 122-26-1 Bocallave Estriada Enc.1/2 26 mm IRIMO	\$ 0
960347	122271A / 122-27-1 Bocallave Estriada Enc.1/2 27 mm IRIMO	\$ 0
960348	122281A / 122-28-1 Bocallave Estriada Enc.1/2 28 mm IRIMO	\$ 0
960349	122291A / 122-29-1 Bocallave Estriada Enc.1/2 29 mm IRIMO	\$ 0
960350	122301A / 122-30-1 Bocallave Estriada Enc.1/2 30 mm IRIMO	\$ 0
960351	122321A / 122-32-1 Bocallave Estriada Enc.1/2 32 mm IRIMO	\$ 0
960360	122661A / 122A-12-1 Bocalla.Estriada Enc.1/2 3/8 " IRIMO	\$ 0
960361	122681A / 122A-14-1 Bocalla.Estriada Enc.1/2 7/16" IRIMO	\$ 0
960362	122701A / 122A-16-1 Bocalla.Estriada Enc.1/2 1/2 " IRIMO	\$ 0
960363	122711A / 122A-18-1 Bocalla.Estriada Enc.1/2 9/16" IRIMO	\$ 0
960364	122731A / 122A-20-1 Bocalla.Estriada Enc.1/2 5/8 " IRIMO	\$ 0
960365	122751A / 122A-22-1 Bocalla.Estriada Enc.1/2 11/16" IRIMO	\$ 0
960367	122781A / 122A-26-1 Bocalla.Estriada Enc.1/2 13/16" IRIMO	\$ 0
960368	122791A / 122A-28-1 Bocalla.Estriada Enc.1/2 7/8 " IRIMO	\$ 0
960369	122801A / 122A-30-1 Bocalla.Estriada Enc.1/2 15/16" IRIMO	\$ 0
960370	122821A Bocalla.Estriada Enc.1/2 1 " IRIMO	\$ 0
960371	122831A / 122A-34-1 Bocalla.Estriada Enc.1/2 1.1/16" IRIMO	\$ 0
960373	122851A / 122A-38-1 Bocalla.Estriada Enc.1/2 1.3/16" IRIMO	\$ 0
960374	122861A / 122A-40-1 Bocalla.Estriada Enc.1/2 1.1/4 " IRIMO	\$ 0
960401	123781A Bocall.P/Bujia Enc.1/2 21-13/16 IRIMO	\$ 0
960620	125-70-1 Crique 1/2" Tipo Pera QR IRIMO	\$ 0
960622	125001A / 125-22-1 Extension 1/2-75 mm IRIMO	\$ 0

Código	Descripción	Precio
960624	125011A / 125-23-1 Extension 1/2-125 mm IRIMO	\$ 0
960610	125081A / 125-42-1 Mango Corredizo Enc. 1/2 IRIMO	\$ 0
960612	125251A / 125-40-1 Articulacion Univ. Enc. 1/2 IRIMO	\$ 0
960614	125421A / 125-52-1 Mango Artic. Enc. 1/2 de 250 mm IRIMO	\$ 0
960570	126101A / 126-10-1 Bocall.Enc.1/2 Torx E-10 IRIMO	\$ 0
960572	126121A / 126-12-1 Bocall.Enc.1/2 Torx E-12 IRIMO	\$ 0
960576	126161A / 126-16-1 Bocall.Enc.1/2 Torx E-16 IRIMO	\$ 0
960578	126181A / 126-18-1 Bocall.Enc.1/2 Torx E-18 IRIMO	\$ 0
960580	126201A / 126-20-1 Bocall.Enc.1/2 Torx E-20 IRIMO	\$ 0
960406	180061A / 180-06-1 Bocall.Punta Exag. 6 mm C.1/2 IRIMO	\$ 0
960407	180071A / 180-07-1 Bocall.Punta Exag. 7 mm C.1/2 IRIMO	\$ 0
960408	180081A / 180-08-1 Bocall.Punta Exag. 8 mm C.1/2 IRIMO	\$ 0
960410	180101A / 180-10-1 Bocall.Punta Exag.10 mm C.1/2 IRIMO	\$ 0
960412	180121A / 180-12-1 Bocall.Punta Exag.12 mm C.1/2 IRIMO	\$ 0
960520	183201A / 183-20-1 Bocall.Punta Torx. T-20 1/2 IRIMO	\$ 0
960525	183251A / 183-25-1 Bocall.Punta Torx. T-25 1/2 IRIMO	\$ 0
960527	183271A /183-27-1 Bocall.Punta Torx. T-27 1/2 IRIMO	\$ 0
960530	183301A / 183-30-1 Bocall.Punta Torx. T-30 1/2 IRIMO	\$ 0
960540	183401A / 183-40-1 Bocall.Punta Torx. T-40 1/2 IRIMO	\$ 0
960545	183451A / 183-45-1 Bocall.Punta Torx. T-45 1/2 IRIMO	\$ 0
960550	183501A / 183-50-1 Bocall.Punta Torx. T-50 1/2 IRIMO	\$ 0
960555	183551A / 183-55-1 Bocall.Punta Torx. T-55 1/2 IRIMO	\$ 0
960560	183601A / 183-60-1 Bocall.Punta Torx. T-60 1/2 IRIMO	\$ 0
960575	185-08-1 Bocallave Punta XZN Corta M 8 IRIMO	\$ 0
960567	185401A Bocall.Punta XZN Larga M10 C1/2 IRIMO	\$ 0
960464	191-10-175 Llave T Bocallave 10x175 IRIMO	\$ 0
960467	191-12-175 Llave T Bocallave 12x175 IRIMO	\$ 0
960470	191-13-175 Llave T Bocallave 13x175 IRIMO	\$ 0
960450	191-6-150 Llave T Bocallave 6x150 IRIMO	\$ 0
960460	191-8-175 Llave T Bocallave 8x175 IRIMO	\$ 0
960680	303111A Llave P/Caño IRIMO	\$ 0
960002	5-150-2 Llave Ajustable Irimo 6" IRIMO	\$ 0
960003	5-200-2 / 5-200-1 Llave Ajustable Irimo 8" IRIMO	\$ 0
960004	5-250-2 / 5-250-1 Llave Ajustable Irimo 10" IRIMO	\$ 0
960005	5-300-2 Llave Ajustable Irimo 12" IRIMO	\$ 0
960007	5-450-2 Llave Ajustable Irimo 18" IRIMO	\$ 0
960737	601-160-1 Pinza Universal 160 mm IRIMO	\$ 0
960738	601-180-1 Pinza Universal 180 mm IRIMO	\$ 0
960740	601-200-1 Pinza Universal 200 mm IRIMO	\$ 0
960930	601.721 Set de 7 Pinzas y Alicates IRIMO	\$ 0
960734	604-160-1 Pinza Punta Plana 160 mm IRIMO	\$ 0
960736	604-180-1 Pinza Punta Plana 180 mm IRIMO	\$ 0
960745	608-160-1 Pinza Punta Redonda 160 mm IRIMO	\$ 0
960732	612-200-1 Pinza Punta 1/2 Caña 200 mm IRIMO	\$ 0
960747	613-200-1 Pinza Punta Semiredonda Curva 200 mm IRIMO	\$ 0
960700	624.140-1 Alicate Corte Diagonal 140 mm IRIMO	\$ 0
960702	624.160-1 Alicate Corte Diagonal 160 mm IRIMO	\$ 0
960704	624.180-1 Alicate Corte Diagonal 180 mm IRIMO	\$ 0
961240	631-200-1 Tenaza Carpintero 200mm. IRIMO	\$ 0
960750	634Q-250-1 Pinza MULTIFIX IRIMO	\$ 0
961235	666-156-1 Cutter 18mm. IRIMO	\$ 0

Código	Descripción	Precio
960754	800-208-1 Serrucho 20" Dientes Templados IRIMO	\$ 0
960841	9020F550FF10 Set Herramientas Enca.1/2 Caja Metalica 67 Pza. IRIMO	\$ 0
960840	9020F550TS1 Set Herramientas Caja Metalica 31 Pza. IRIMO	\$ 0
960979	9064K-25 Carro Portaherramientas 5 Cajones IRIMO	\$ 0
960800	911001A Set Herramientas IRIMO 16 Pza.	\$ 0
960804	911002A Set Herramientas IRIMO 16 Pza.	\$ 0
960808	911003A Set Herramientas IRIMO 17 Pza.	\$ 0
960812	911004A Set Herramientas IRIMO 14 Pza.	\$ 0
960816	911005A Set Herramientas IRIMO 19 Pza.	\$ 0
960820	911006A Set Herramientas IRIMO 8 Pza.	\$ 0
960824	911007A Set Herramientas IRIMO 12 Pza.	\$ 0
960828	911008A Set Herramientas IRIMO 11 Pza.	\$ 0
960650	Destor. Pta.Conica I4155-100 / 407A-5.5-100 IRIMO	\$ 0
960670	Destor. PERILERO Pta.Phillips 415A-PH0-60 IRIMO	\$ 0
960640	Destor. PERILLERO Pta.Plana 415A-PP3-60 IRIMO	\$ 0
960648	Destor. Pta. Plana Conica 407A-4-100 IRIMO	\$ 0
960652	Destor. Pta.Conica I4165-125 / 407A-5.5-125 IRIMO	\$ 0
960654	Destor. Pta.Conica I4165-150 / 407A-5.5-150 IRIMO	\$ 0
960656	Destor. Pta.Conica I4180-150 / 407A-8-150 IRIMO	\$ 0
960672	Destor. Pta.Phillips I4345-100 / 409A-1-100 IRIMO	\$ 0
960674	Destor. Pta.Phillips I4360-125 / 409A-2-125 IRIMO	\$ 0
960676	Destor. Pta.Phillips I4380-150 / 409A-3-150 IRIMO	\$ 0
960644	Destor.Pta.Recta I4240-100 IRIMO	\$ 0
960646	Destor.Pta.Recta I4240-150 IRIMO	\$ 0
960685	Destornillador Punta TORX I44T10-75 IRIMO	\$ 0
960688	Destornillador Punta TORX I44T20-100 IRIMO	\$ 0
960690	Destornillador Punta TORX I44T25-125 IRIMO	\$ 0
960692	Destornillador Punta TORX I44T27-125 IRIMO	\$ 0
960237	Exhibidor de Destornilladores IRIMO I 4000 -72	\$ 0
960240	Exhibidor Grande IRIMO Chapa (VACIO)	\$ 0
960239	Exhibidor IRIMO 911400A	\$ 0
960238	Exhibidor IRIMO 911800A	\$ 0
960242	Exhibidor SERVIRIMO-M1 Chapa (VACIO)	\$ 0
960232	PANEL DE BOCALLAVES IRIMO 910001A (VACIO)	\$ 0